

飞易通— 固件空中升级手册（OTA）

（目前仅支持 Android 系统）

版本 V2.0

Android DFU via Bluetooth



1. 在手机上安装蓝牙串口 **蓝牙串口**，使用者可自行在：腾讯应用宝；百度手机助手；Google Play；安卓市场；91 助手搜索“蓝牙串口”下载安装或是找飞易通技术支持提供 APK 安装包。

2. 开启蓝牙后打开 APP 进入通讯界面（图 1），空中升级需要切换至设置界面（图 2）。



图 1



图 2

3. 点击 (图 2) 设置界面中的空中升级进入如下界面：以下，使用 FSC-BT816S 模块演示。

The screenshot shows the '空中升级' (Over-the-air Upgrade) interface. It includes a progress bar at the top, a '选择文件' (Select File) button, a list of selected files, a table of device information, a checkbox for '升级并恢复出厂设置' (Upgrade and restore factory settings), and a '开始升级' (Start Upgrade) button.

Callouts and their corresponding interface elements:

- 1. 升级状态进度条 (Upgrade status progress bar)
- 1. 点击文件夹图标选取要升级的固件(.dfu 后缀) (Click the folder icon to select the firmware to be upgraded (.dfu suffix))
- 2. 已选取升级固件的信息 (Information of the selected upgrade firmware)
- 5. 此项内容客户不用关注，APP 自动判断和显示 (This content does not need to be paid attention to by the customer, the APP automatically judges and displays)
- 4. 当前选取固件的信息：
模块的型号：BT816S
APP 版本：825
BL 版本：560 (Information of the currently selected firmware: Module model: BT816S, APP version: 825, BL version: 560)
- 3. 升级完成后是否恢复出厂设置 如需要请勾选上。 (Whether to restore factory settings after upgrade. If needed, please check the box.)
- 6. 开始升级触发键 (Start upgrade trigger key)

	型号	APP版本	BL版本
模块	BT816S	825	560
固件	BT816S	825	560

4. 点击开始升级触发键进入搜索设备界面。

The screenshot shows the device search interface. It lists several devices with their names, addresses, and signal strengths. A callout points to the 'Feasycom' device with address 88:4A:EA:94:36:61.

Callout: 找到需要升级的设备点击后：成功连接并自动进入升级状态 (After clicking the device to be upgraded: successful connection and automatic entry into upgrade state)

5.升级进度状态（图3），升级成功（图4）。



图3



图4

6.如需要升级下一个模块，请重复第3，4点步骤即可。